

CRYSTALACOUSTICS | WiSound

TeevyBar Quick Guide

Thank you for purchasing Crystal Acoustics Teevy Bar

Teevy Bar is the answer to today's TVs demand for great sound, offering deep and powerful bass with incredible dispersion, to bring your TV to life.

In addition, you can connect numerous devices and enjoy countless hours of non compromised listening.

Small yet powerful, it produces an unexpectedly deep and clear bass.

Acoustic Features:

- 7 Drivers with **Balanced Directivity** for wide sound everywhere in the room
- Ideal In-Room response using **WiSound technology**
- **Incredible Bass** down to 48Hz

 
 
 
 
1 Place it

Teevy Bar is designed to be placed in front of your TV. You can alternatively mount it on the wall, or place it on a shelf under your TV rack, taking care not to cover the unit's side speakers.

Note: Before use, place the included self adhesive feet on the bottom corners of the speaker

To mount your Teevy Bar on the wall, you'll need to drill two holes:

1. Mark with a pen or pencil the points where you'll drill the holes. The distance between the two holes is 750mm.
2. Drill the holes on the wall using a drill.
3. Place the plugs in the holes on the wall and enter them fully (you may need a hammer).
4. Screw the mounting hooks in the plugs.
5. Hang your Teevy Bar on the wall, with the high/mid drivers looking up and sideways. After placing it, pull gently on each side, to make sure that the two support points are secured.

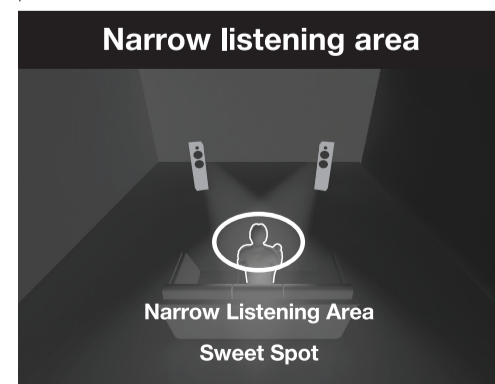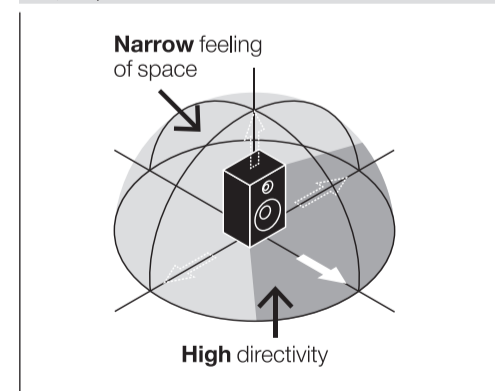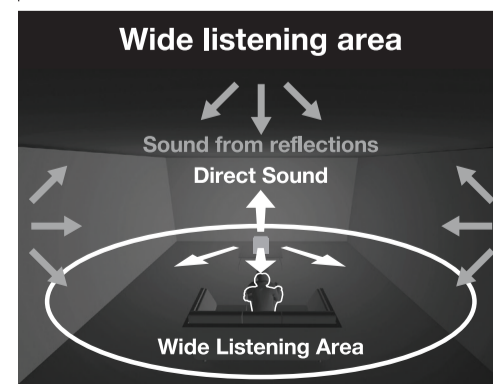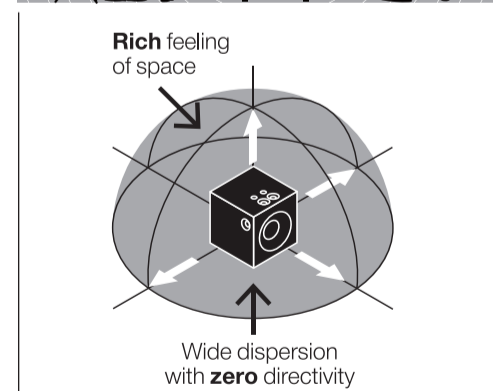

2 Connect it

Connect Teevy Bar to your devices through:

1. **Optical:** If available, use this connection for best quality
2. **RCA:** Connect both left and right channels to your device
3. **AUX 3.5mm:** Connect to the headphone output of your device
4. **USB:** Play songs from your USB HDD/Flash or charge your phone/tablet
5. **Ethernet:** Get network access in case of no/weak Wi-Fi signal

 


Note: When the 3.5mm socket is used, it takes priority over the RCA input and it becomes the Auxiliary Source. In this case the RCA input is muted.

Note: To save power, Teevy Bar will automatically turn off (in optical / line-in mode) if no sound has played through it for 30 minutes. It will automatically turn on again once it receives a signal.

3 Control it

Control Teevy Bar by the included remote control.

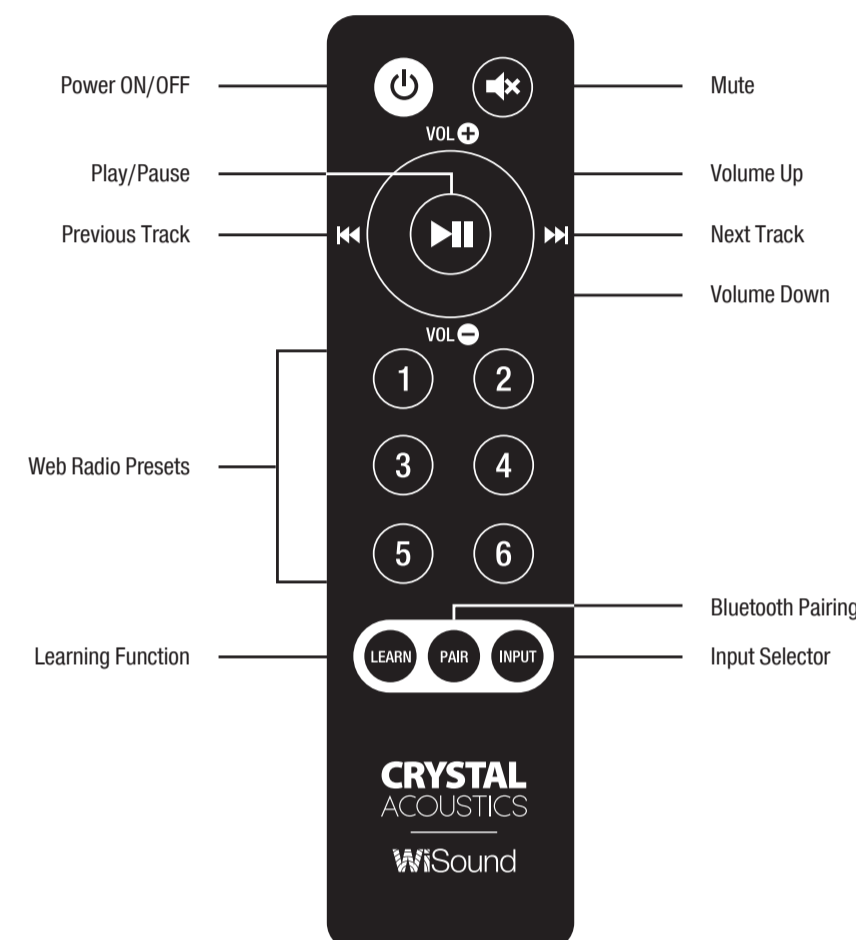

Note: If in maximum volume you are experiencing crackling sound during heavy Bass passages, the protection mechanism for the amplifier and speaker drivers has been activated. Turn down the volume a bit!

4 Select it

Use the Input button on the unit or on the remote control, to cycle between the various available options:



Input colors are according to table:


Color	Input
Blue	Bluetooth
White	Optical
Green	Aux
Yellow	Wi-Fi



5 Pair it [Bluetooth]

You can connect your Teevy Bar with any Bluetooth enabled device (phone, tablet, computer, etc).

 1. Select the **Bluetooth input** on the remote by cycling Inputs.
2. To pair a Bluetooth device to Teevy Bar, press and hold the pairing button for about 5sec. The Bluetooth indicator LED will start blinking.
3. Consult the instructions of the device to be paired to connect to Teevy Bar. Successful pairing will be signaled by a 'beep' from the unit and the Bluetooth indicator LED will stop blinking.

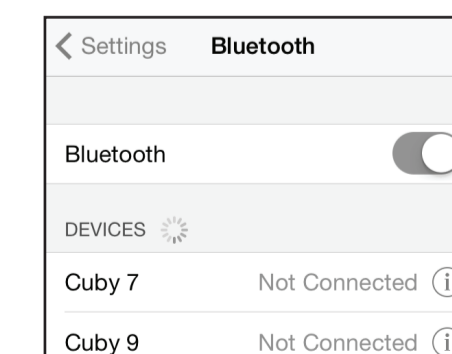

Once paired, music from your device will play through the unit.

To add another Bluetooth device, repeat from step 2. Teevy Bar may store up to eight paired devices in memory.

6 Network it [Wi-Fi]

Use **App Store** (IOS devices) or **Google Play** (Android devices) to download **WiSound** application (**Wi-Fi connection and internet access are required**).

Run the App and follow on screen guide to setup network.

To add the first speaker in your network:

1. Press **Add Device** button



2. Type the **password of your wifi network** and press next



 
3. Press the **WPS button** on the **back** of your speaker and press next



4. The App searches the speaker and **automatically adds it** to your network



5. You can now **select the speaker's name** or **set a custom one**

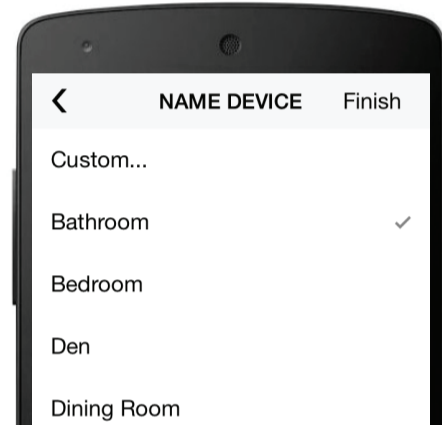

6. To add more speakers, **press + on the top right** and **repeat steps 1-5**



Note: If you use **Ethernet connection**, instead of Wi-Fi the above procedure is not required. You **just need to run the App** and the speaker is already there!

Table below summarizes the **network status** depending on **LED**:

Useful:

If there is **no Wi-Fi router available**, you can connect your phone/tablet **directly** to the speaker's network. Typically the name is **TeevyBarX_YY** and the default password is **Wisound1234**. You are strongly advised to **change this password** through the **App** or through your **speaker's web interface** (**10.10.10.254**, under **Network** tab)

7 Group It

In the list of the **available speakers**, grab and **drag one speaker and drop it over another speaker**. In this way, this speaker (slave) becomes **part of a group** and **Master's music** is also played through all the **Slave speakers**.



Multi Mode: Press and hold device icon and drag towards another device to pair devices.

If you want to **ungroup**, just grab and **drag the slave speaker below the middle line**. Slave speaker becomes **Master speaker** and **can play different music**.



Solo Mode: Press and hold device icon and drag down past dotted line.

 
Useful:

- You can make **one or more** groups
- You can have **more than one Slave** speakers under the **same Master**
- In a Group, even if the source is **Optical / Line in / Bluetooth**, you can listen to Slave speakers playing the **same song** as the Master speaker (**Redirect feature**)
- You can simultaneously control the **volume of all the speakers** in a group by using Volume buttons of your phone/tablet
- For a **Group** configuration, choose which speaker can play **Left (L)**, **Right (R)** or **Left/Right (LR)**, by touching the **relevant icon**.


8 Learn it

You can **control Teevy Bar's volume** with your **TV's remote control**. To learn your TV's remote to Speaker:


1. Keep pressed **LEARN** button on **remote** for about **2 seconds** (LED slow blinking)

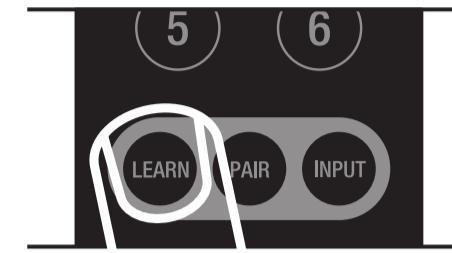

 2. Press either **Vol+ on speaker's remote** (LED fast blinking)

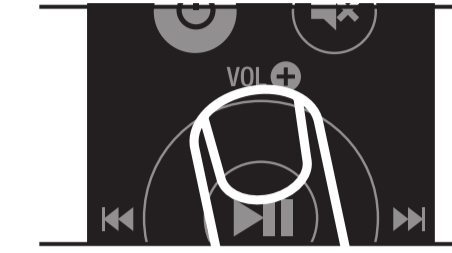

 3. Press relevant **Vol+ on TV's remote** (LED stops blinking)

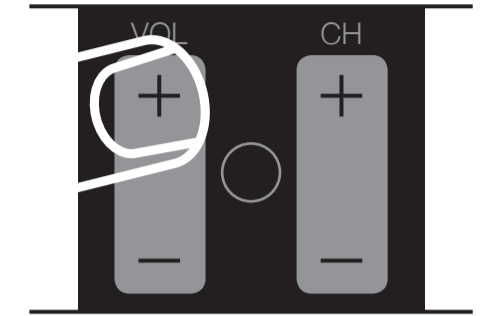


4. Repeat steps 1-3 for **Vol-**


Note: Some TV remotes **may not be compatible** with **Learning function**

9 Play it

 
Music Selection

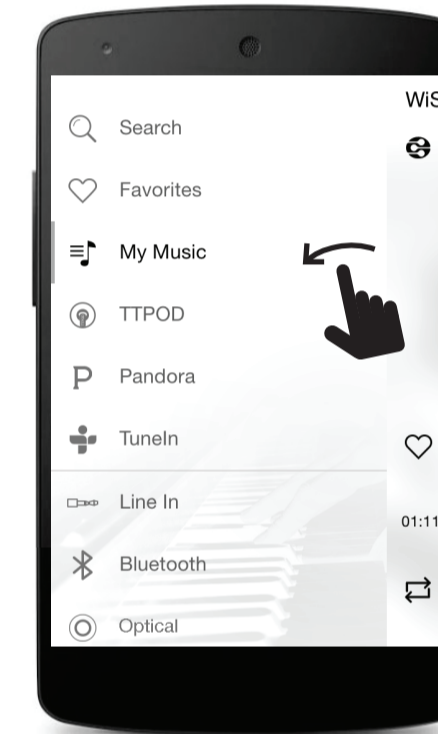

Now playing

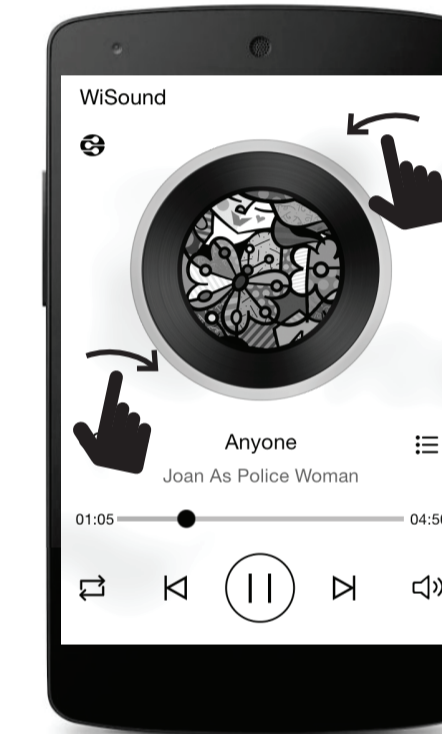 

Available speakers

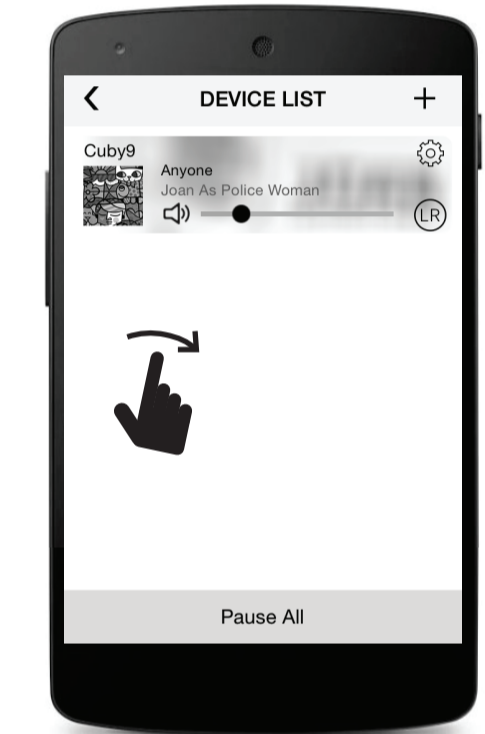 

- Select your **local songs** or **USB songs** through **My Music**
- Access **Web Radio** through **TuneIn**
- Change **Input** through **Line In / Bluetooth / Optical**
- Search** for **online songs** through **Search**
- Access your **Favorites** through **Favorites**
- Access **Web services** (Pandora/Spotify/Deezer) by touching the **corresponding icons** (region dependent)

 
Useful:

Your friends/guests can **stream** their music to the **entire group** of speakers **without downloading any Apps** or having to **connect** to your sensitive **Wi-Fi** network. Just ask them to **pair** their phones/tablets via **Bluetooth** to the **Master speaker!**

10 Preset it

To **assign** web radio stations to **preset** buttons (up to 6 stations can be assigned):


1. Select **TuneIn**

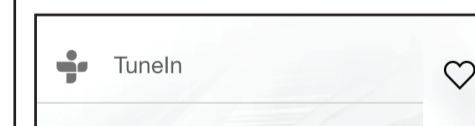


2. Browse your favorite **station**



 3. Press the **small icon** next to the **web radio station**

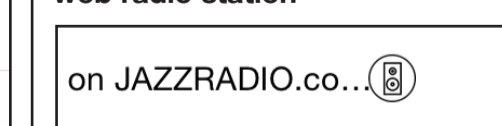

 4. Select the required **preset number**

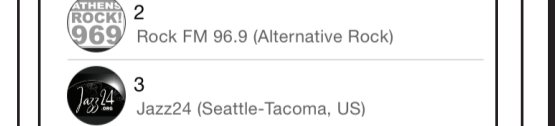

Any time wishing to **access** the **preset** web radio stations, simply **select Wi-Fi as input** and **press** the relevant **button** on the **remote**.

11 Charge it

You can charge any **USB** powered device. Just **plug it** to your Teevy Bar's **USB Power Out**.

CrystalAcoustics.com | WiSound.com
WirelessMultiroom.com